

CAT5e UTP module installation instructions

1、 Using CAT5e UTP Twisted-pair cable (Picture 1) and CAT5e UTP module (Picture 2) for termination:



Picture 1



Picture 2

2、 Installation steps。

(1) Using Wire stripping knife to cut 20-30mm of Twisted-pair cable sheath, and tear the rope.



(2) Follow the information module to lock the T568B or T568A standard marked on the termination cap, Straighten the core.

T568B: white/orange, orange, white/green, blue, white/blue, green, white/brown, brown

T568A: white/green, green, white/orange, blue, white/blue, orange, white/brown, brown




(3) Use a scissors to cut straight twisted pair with a 45 degree bevel (easy to insert the cap)



(4) With cut the twisted pair core through the buckle termination cap, to the information module base card contact



(5) Straighten and bend the rest core to the opposite side

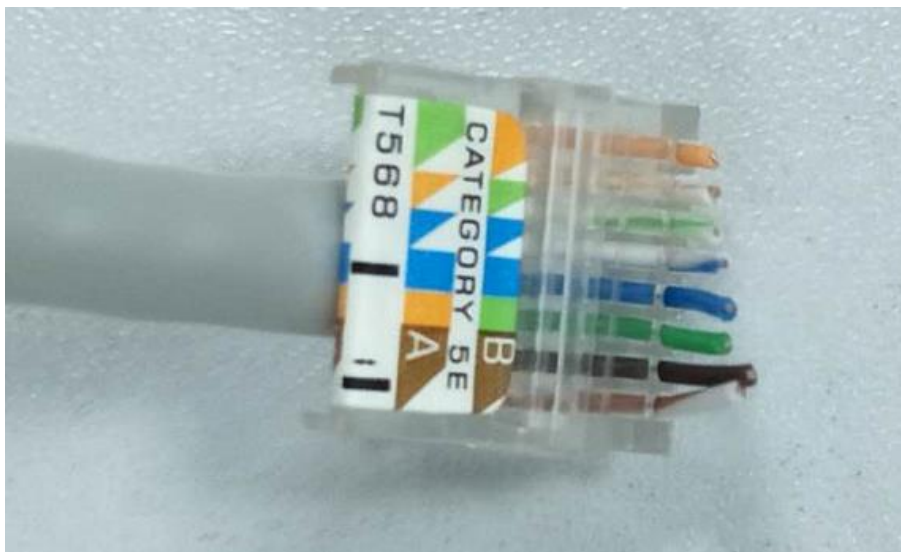

(6) Trim the cable at the top.




Good



Poor

(7) Finally, press the buckle terminating cap into the module base, So that the core and the base metal fully contact to complete the module termination

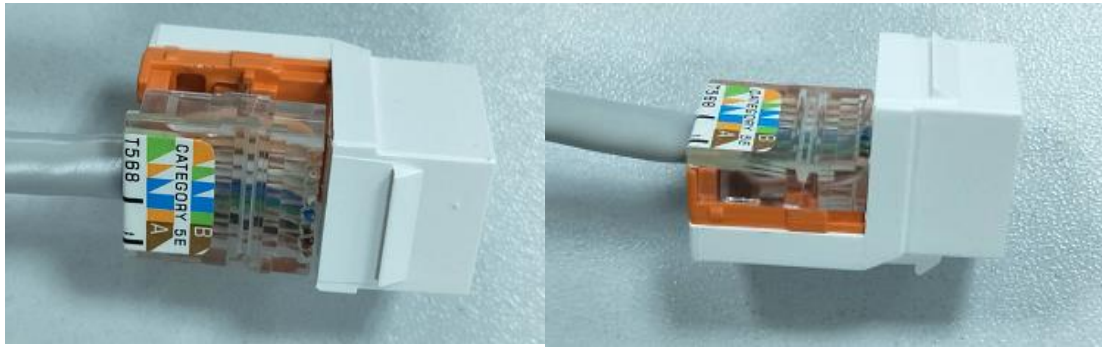

Start again (1) ~ (7) steps, Complete the termination of a link.

※Termination cap must be tightly closed.



Poor termination.