


Instruction Manual – FO Closure for Underground –

Assembly

- ① Closure main body
- ② Cover
- ③ Tray
- ④ Mounting buckle



- 1.Process cables' entry holes
 - a. Cut 3 mm from the tip.

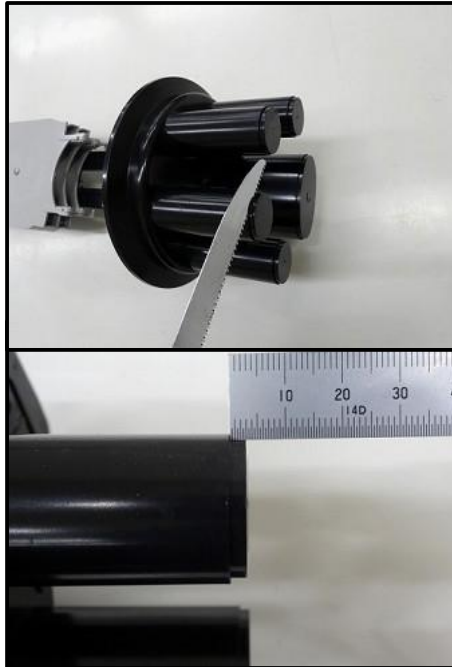


- b. Use a file to remove burrs.




2. Preparation for cables

- a. Length of cable jacket: 1130 mm or more.
- b. Length of loose tube: to entry tray.

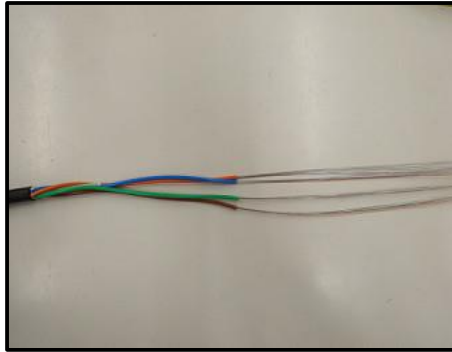


- c. Length of tension (FRP): 50 mm or less

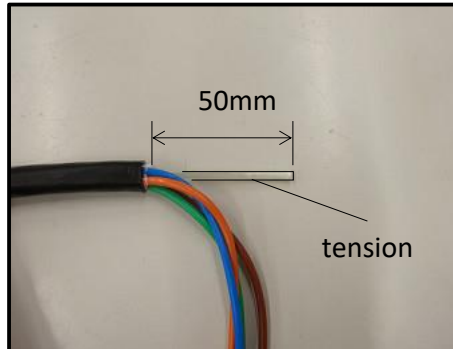


3. Fixing cable

- a. Hold the cable with the tension member fixed.
- b. Tension member protrudes 5 mm from end.

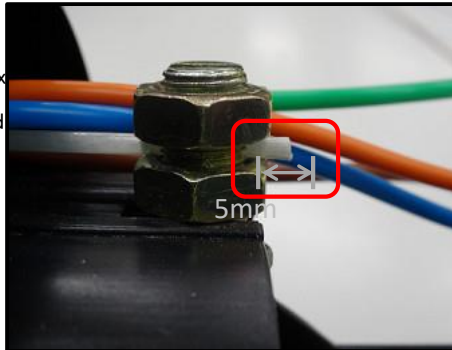

- c. Tighten the nut using the supplied tool.
- Do not damage the tension member.

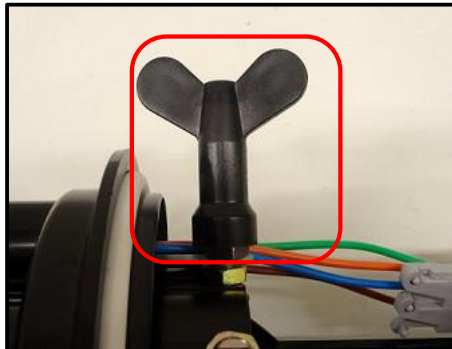


4. Fixing loose tube


- a. Fix loose tube to storage tray using two cable ties.



5. Connect to fibers.

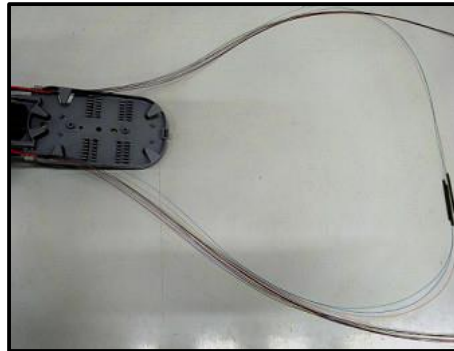


6. Storing

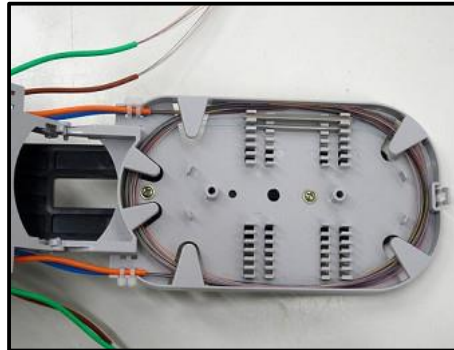


- a. Sleeves fixed position.


- 1- 6(Lower), 7-12(Upper)

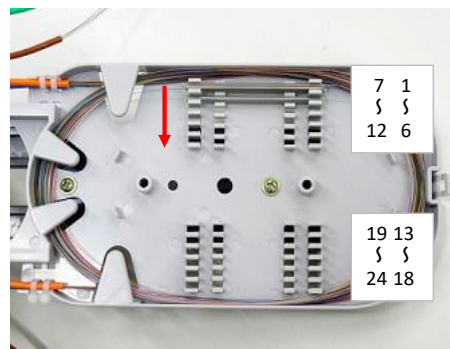


Side view

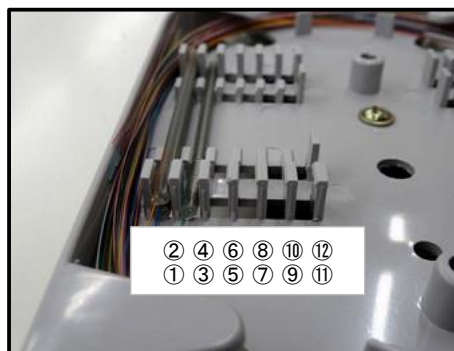

b. Install bolt and nut

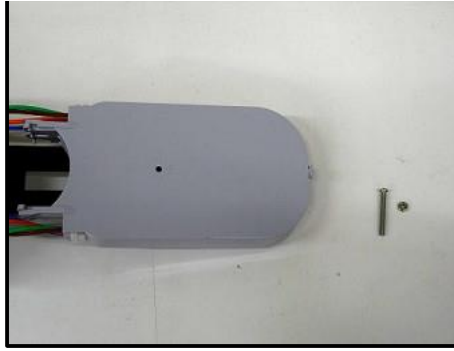

7. Completion

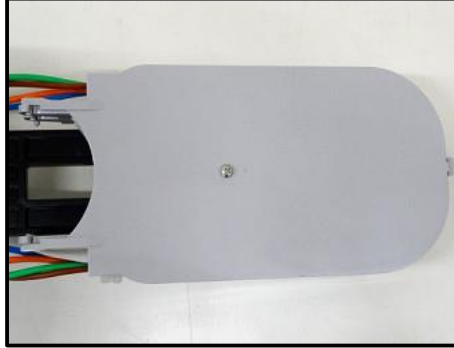


Mount


- a. Closure(main body)
- b. Supporting part
- c. Fixing part



1. Fixing part attached to main body.

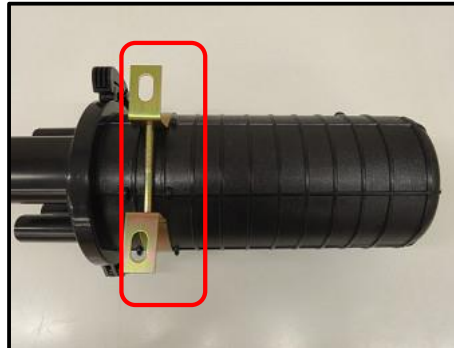

2. Mounting supporting part to wall.

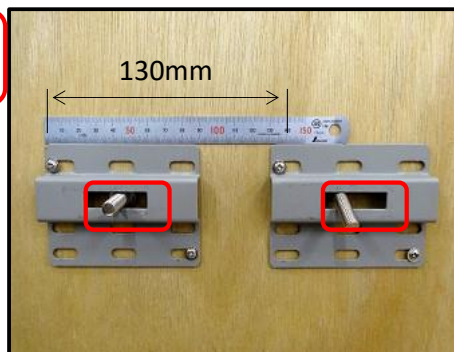

3. Fix closure using bolt and nut



4. Completion

